

FLINT AERO, INC.  
1942 Joe Crosson Drive  
El Cajon, CA 92020  
Doc. No.: FTC453.002

**FAA APPROVED  
AIRPLANE FLIGHT MANUAL SUPPLEMENT  
TO THE  
OFFICIAL PILOT'S OPERATING HANDBOOK AND  
FAA APPROVED AIRPLANE FLIGHT MANUAL  
AND  
SUPPLEMENTAL AIRPLANE FLIGHT MANUAL  
FOR  
CESSNA 182 AIRPLANES  
WITH  
FLINT AERO AUXILIARY FUEL TANKS**

The information in this document is FAA approved material and must be attached to the FAA Approved Airplane Flight Manual or carried in the airplane if the airplane does not have an FAA approved Airplane Flight Manual when the airplane has been modified by the installation of the Flint Aero Auxiliary Fuel Tanks in accordance with STC SA1758WE.

This document is applicable to the Official Pilot's Operating Handbook and FAA Approved Airplane Flight Manual for those Cessna 182 airplanes which require the manual, and to the basic placards and markings for those airplanes without a manual. The following airplanes are included when Flint Aero, Inc. Auxiliary Fuel Tanks have been installed, and this document is applicable to below model landplanes, ski planes, and floatplanes:

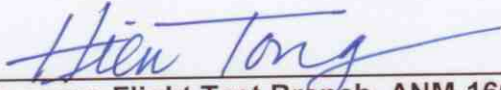
TC 3A13: 182, 182A, 182B, 182C, 182D, 182E, 182F, 182G, 182H, 182J, 182K, 182L, 182M, 182N, 182P, 182Q, R182, TR182, 182R, T182, 182S, 182T, T182T

TC A43EU : \* F182P  
\* Reims Aviation S.A. Cessna Models

The information contained herein appends, supplements, or supersedes the Official Pilot's Operating Handbook and FAA Approved Airplane Flight Manual or the basic placards and markings for Cessna 182 airplanes only in those areas listed herein. For limitations, procedures, and performance information not contained in this Appendix, consult the Official Pilot's Operating Handbook and FAA Approved Airplane Flight Manual for Cessna 182 airplanes or the basic placards and markings.

FAA Approved

*Actg*

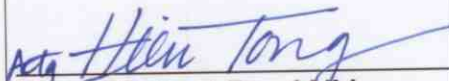
  
\_\_\_\_\_  
Manager, Flight Test Branch, ANM-160L  
Federal Aviation Administration  
Los Angeles Aircraft Certification Office  
Transport Airplane Directorate

Date: 5/8/06

FLINT AERO, INC.  
 1942 Joe Crosson Drive  
 El Cajon, CA 92020  
 Doc No.: FTC453.002

AFMS for Cessna Model 182 with  
 Flint Aero, Inc. STC SA1758WE  
 Auxiliary Fuel Tanks

### LOG OF PAGES

Rev. No.	Page		Description	FAA Approved
	No.	Date		
Original	Title Log	5/8/06 5/8/06	Complete Supplement	 Mgr., Flt. Test Br., ANM- 160L, FAA, Los Angeles ACO, Transport Airplane Directorate  Date <u>5/8/06</u>
	Contents 1-13	5/8/06 5/8/06		

## TABLE OF CONTENTS

<u>SECTION</u>	<u>PAGE</u>
TITLE PAGE .....	1
LOG OF PAGES .....	2
TABLE OF CONTENTS .....	3
SECTION I – GENERAL .....	4
SECTION II – LIMITATIONS .....	5
SECTION III – EMERGENCY PROCEDURES .....	9
SECTION IV – NORMAL PROCEDURES .....	9
SECTION V – PERFORMANCE .....	10
SECTION VI – WEIGHT AND BALANCE/EQUIPMENT LIST .....	11
SECTION VII – AIRPLANE & SYSTEMS DESCRIPTIONS .....	12
SECTION VIII – AIRPLANE HANDLING, SERVICE AND MAINTENANCE WITH AUXILIARY (TRANSFER) FUEL .....	13

## SECTION I – GENERAL

This Flint Aero, Inc. Supplement to the Official Pilot's Operating Handbook and FAA Approved Airplane Flight Manual or the basic placards and markings for Cessna 182 airplanes addresses the operation of the airplanes when modified by installation of Flint Aero Auxiliary Fuel Tanks in accordance with STC SA1758WE. New performance data are included herein. The changes to the Performance Specifications are shown in Table 1-1 below.

Table 1-1

PERFORMANCE SPECIFICATIONS WITH AUXILIARY TANKS			
SPEED	Maximum (V <sub>NO</sub> )		See Limitations
	Max Cruise Power – Standard Day Conditions		No Change
CRUISE	With fuel allowance for engine start, taxi, takeoff, climb and 45 minutes reserve.		
	Additional range and endurance for Basic Airplane set in Cruise Power range @10,000 ft with 23 Gal usable auxiliary fuel.	Range	264 NM
		Time	1.9 Hrs.
CLIMB	Sea Level Std Day Rate of Climb		No Change
	Service Ceiling		No Change
TAKEOFF	Sea Level Std Day Ground Roll		No Change
	Total Distance Over 50 Ft. Obstacle		No Change
LANDING	Sea Level Std Day Ground Roll		No Change
	Total Distance Over 50 Ft. Obstacle		No Change
STALL	Flaps Up, Power Off		No Change
	Flaps Down, Power Off		No Change
MAXIMUM WEIGHT	Ramp		No Change
	Takeoff		No Change
	Landing		No Change
STANDARD EMPTY WEIGHT – Basic airplane plus			40 LBS
MAXIMUM USEFUL LOAD – Basic airplane minus			40 LBS
BAGGAGE ALLOWANCE (See applicable POH)			No Change
WING LOADING: lbs./Sq.Ft.			No Change
POWER LOADING lbs./HP			No Change
FUEL CAPACITY Basic airplane plus 23 useable US gal Aux Fuel			23 GAL
OIL CAPACITY			No Change.
ENGINE:			No Change
PROPELLER:			No Change

The above performance figures are based on fuel consumption values published in the Official Pilot's Operating Handbook and FAA Approved Airplane Flight Manual or the basic placards and markings for Cessna 182 and will vary with individual airplanes and numerous factors affecting flight performance.

## SECTION II – LIMITATIONS

### Airspeed Limitations

Model 182N:

Maneuvering: 128 MPH (111 KCAS)

Never Exceed: 193 MPH (168 KCAS)

Model 182P (S/N 675, 18260826 through 18264295):

Never Exceed: 193 MPH (168 KCAS)

Model 182P (S/N 18264296 and up; F182P, 182Q, 182R, T182, 182S, 182T, T182T)

Never Exceed: 172 KCAS

For Models TR182, T182, and T182T: "Reduce  $V_{ne}$  5 MPH per 1,000 ft. above 18,000 ft."

### Airspeed Indicator Markings

The airspeed indicator of models 182N and 182P (S/N 675, 18260826 through 18264295) are re-marked to show the top of the yellow arc and the red line at 193 MPH (168 KIAS).

The airspeed indicator of models 182P (S/N 18264296 and up; F182P, 182Q, 182R, T182, 182S, 182T, T182T) are re-marked to show the top of the yellow arc and the red line at 172 KIAS.

### Power Plant Instrument Markings

The following entry is added to the Powerplant Instrument Markings Table:

Power plant markings and their color-code significance.

INSTRUMENT	RED LINE (MINIMUM)	GREEN ARC (NORMAL OPERATING)	RED LINE (MAX)
Auxiliary Fuel Tank Quantity Indicators	E		
	(0.5 U.S. Gal. Unusable Each Tank)	-----	-----

### Weight Limits

No change. Refer to current weight and balance documents.

### Center of Gravity Limits

Aft CG limit is 45 in. AOD for Models 182E through 182R and T182 with fuel in aux tanks.

FLINT AERO, INC.  
 1942 Joe Crosson Drive  
 El Cajon, CA 92020  
 Doc No.: FTC453.002

**AFMS for Cessna Model 182 with  
 Flint Aero, Inc. STC SA1758WE  
 Auxiliary Fuel Tanks**

Aft CG limit is 44 in. AOD for Models R182, TR 182, 182S, 182T, T182T with fuel in aux tanks.

Maneuver Limits

Model 182N Maneuvering speed: 128 MPH (111 KCAS)

Flight Load Factor Limits

No change

Kinds of Operations Limits

No change

Fuel Limitations

Fuel capacity is increased to the values in Tables 1-2 and 1-3 below:

Table 1-2

<b>FUEL CAPACITY, U.S. GALLONS</b>											
CESSNA MODELS	182										
	182	A, B, C, D, E, F, G,	H, J, K, L, M, N, P	P	P	P	Q	R182	TR182	182R, T182, 182S, 182T	182T, T182T
Total Capacity	60	65	65	84	61	80	92	61	92	92	92
Total Usable	55	55	60	79	56	75	88	56	88	88	87
Total Capacity, Each Main Tank	30	32.5	32.5	42	30.5	40	46	30.5	46	46	46
Total Usable, Each Main Tank	27.5	27.5	30	39.5	28	37.5	44	28	44	44	43.5
Total Capacity, Each Aux Tank	12	12	12	12	12	12	12	12	12	12	12
Total Usable, Each Aux Tank	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5

Table 1-3

<b>FUEL CAPACITY, U.S. GALLONS</b>											
REIMS, SA MODELS	F182P										
Total Capacity	61										
Total Usable	56										
Total Capacity, Each Main Tank	30.5										
Total Usable, Each Main Tank	28										
Total Capacity, Each Aux Tank	12										
Total Usable, Each Aux Tank	11.5										

### 9.1 Auxiliary Fuel Tank Transfer Limits

- When feeding from either or both main tanks, do not transfer auxiliary tank fuel into a main fuel tank until it is at least 15.0 gallons below full.
- When feeding from either main tank, begin tip tank transfer into that tank before its level drops below five gallons remaining.
- Do not transfer auxiliary fuel unless in level flight.
- Do not transfer auxiliary fuel during take off, landing, refueling, and when empty.

Note: Main fuel tank quantity below the full level can be determined by reference to fuel quantity gauges and by calculating fuel used by:

- 1) Estimating engine fuel flow rates versus time.
- 2) If installed, using engine fuel flow rate indicator vs. time.

### Placards

The following information is displayed in the form of composite or individual placards.

10.1 In full view of pilot: "Total aux fuel 24 U.S. gals (23 gal useable)  
Transfer aux fuel only in level flight when main is half empty and when main tank is not supplying engine." Aux fuel switch must be off during takeoff, landing, filling and when empty. For utility category operation aux tank fuel switch must be off and aux tanks empty."

10.2 At auxiliary fuel tank pump switches:

"Left wing aux fuel 12.0 U.S. gallons 11.5 gallons usable ON OFF"	"Right wing aux fuel 12.0 U.S. gallons 11.5 gallons usable ON OFF"
--	---

10.3 Installed adjacent to each wing aux fuel tank leak detection drain (2 per side)  
"Fuel or vapor from drain  
requires immediate repairs"

10.4 Installed adjacent to appropriate wing tip tank pump circuit breakers:  
"Aux tank L pump"      Aux tank R pump"

10.5 For Models 182 through models 182D; Forward of each auxiliary tank filler: "12 U.S. gal. 80 min. grade Av. gasoline. Aux. fuel switch must be off before filling."

10.6 For Models 182E through models 182P and F182P; Forward of each auxiliary tank filler: "12 U.S. gal. 80/87 min. grade Av. gasoline. Aux. fuel switch must be off before filling."

10.7 For Model 182Q; Forward of each auxiliary tank filler: "12 U.S. gal. 100/130 min. grade Av. Gasoline. Aux. fuel switch must be off before filling."

10.8 For Models 182R, R182S, 182T, R182, TR182, T182, T182T; Forward of each auxiliary tank filler: "12 U.S. gal. 100LL/100 min. grade Av. gasoline. Aux. fuel switch must be off before filling."

10.9 For Models 182E through 182R and T182 – in full view of the pilot: "Aft CG limit 45 in. with fuel in the aux tanks."

10.10 For Models R182 and TR182 – in full view of the pilot: "Aft CG limit 44 in. with fuel in the aux tanks."

10.11 For Models TR182, T182, and T182T: "Reduce  $V_{ne}$  5 MPH per 1,000 ft. above 18,000 ft."

### SECTION III – EMERGENCY PROCEDURES

#### NOTE

With Flint Aero, Inc. Auxiliary Fuel Tanks installed, fuel transfer to the standard main wing tanks is provided by the auxiliary fuel transfer tank pumps controlled by the auxiliary fuel tank transfer pump switches.

#### EMERGENCY LANDING WITH OR WITHOUT ENGINE POWER

Auxiliary Fuel Tank transfer pump switches.....OFF.

#### WING FIRE

Auxiliary Fuel Tank transfer pump switches.....OFF.

### SECTION IV – NORMAL PROCEDURES

#### PREFLIGHT INSPECTION – AUXILIARY FUEL TRANSFER TANKS

1. Visually inspect external areas of wing around auxiliary fuel tanks for any signs of fuel leakage.
2. Check each auxiliary tank filler cap for security and vent lines for obstructions. Visually check wing tip fuel tanks for quantity.
3. From each auxiliary fuel tank, drain a sample quantity of fuel. Check for contamination. If any water is visible, drain additional amounts of fuel until all water is expelled from the tank.
4. Master switch on. Check auxiliary fuel tank gauges for fuel quantity.
5. With master switch on, check each auxiliary fuel tank pump for operation by operating each pump separately with auxiliary fuel tank transfer switches. Listen for pump operation. If no noise or vibration, assume pump is not operating. Check for serviceability.

#### Before Takeoff

- a. Auxiliary fuel tank transfer pump switches.....OFF

## SECTION V – PERFORMANCE

The performance data in this supplement address the operation of an airplane incorporating Flint Aero STC SA1758WE Auxiliary Tanks. There are no changes to the Performance Section except for the Range and Endurance charts.

### RANGE AND ENDURANCE PROFILES

With the Flint Aero auxiliary fuel tanks installed, the Cessna 182 cruise performance charts are valid for the usable fuel quantity as stated in the basic manual. The use of two full 12.0 U.S. Gallons (11.5 gal. usable) auxiliary tanks increases the range and endurance shown in Figures 5-9, 5-10, and 5-11 of the Cessna 182R Pilot's Operating Handbook Supplement and FAA Approved Airplane Flight Manuals. The amount of increase in range and endurance will depend on the cruise speed, altitude, and power setting chosen, and will be different for each powerplant and airplane model. The increase in range and endurance of the added fuel can be calculated from the cruise speed and fuel consumption of each model at the altitude and temperature desired. The new airplane range and endurance can then be found by adding the range and endurance increases to the values tabulated in the Cessna manuals.

To calculate the range increase, find the True Airspeed and Gal/Hr fuel consumption for the cruise altitude and power setting desired. Calculate the cruise Miles per Gallon by dividing the Airspeed by the fuel consumption in gallons per mile:

$$\text{Miles / Hr} \div \text{Gal / Hr} = \text{Miles / Gal.}$$

Then multiply the miles per gallon by 23 gallons, the usable fuel contained in the auxiliary tanks to obtain the added range. Add this value to the range tabulated in the original Cessna manual to get the new range with the Flint Aero auxiliary tanks installed and filled.

To calculate the endurance increase, divide 23 gallons by the fuel consumption:

$23 \text{ Gallons} \div \text{Gallons / Hr} = \text{Hrs Endurance.}$  Add this number of hours to the endurance tabulated in the original Cessna manual to get the new endurance with the Flint Aero auxiliary tanks.

## SECTION VI – WEIGHT AND BALANCE/EQUIPMENT LIST

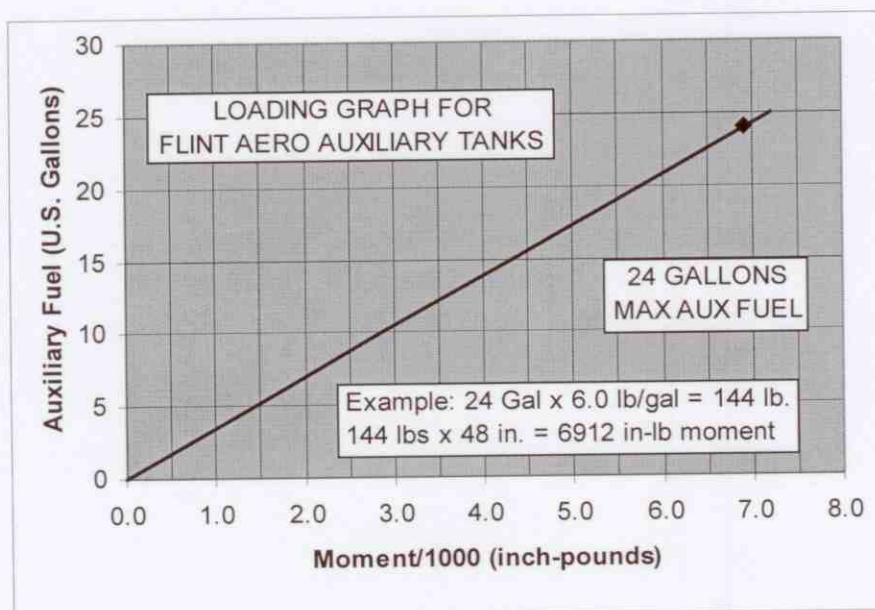
ITEM NO	EQUIPMENT LIST DESCRIPTION	REF DRAWING	WEIGHT lbs.	ARM inches	MOMENT lb.-in.
2, 3	J. SPECIAL PACKAGES				
	Install Flint Aero Aux Wing Fuel Tank Systems	FA170	34.0	49.0	1666
	2 - Unusable fuel in Flint Aero Wing Tip Tanks (1.0 U.S. Gal. Avgas at 6.00 lbs./U.S.gal.)	FA170	6.0	50.0	300
	TOTAL INSTALLATION NET CHANGE		40.0	49.2	1966

In calculating weight and balance for full auxiliary fuel tank:  
 23 U.S. gal. Avgas usable x 6.0 lbs./U.S. gal. x 48 in. arm = 6624 lb.-in. or 6.624 lb.-in./1000.

C.G. Arm = total moment divided by total weight.

### CENTER-OF-GRAVITY

Center of Gravity range, loading moments, and limits are unchanged. The load moment diagram for the auxiliary fuel tanks is shown below:



## SECTION VII – AIRPLANE & SYSTEMS DESCRIPTIONS

### 1. Fuel Tank Capacities (U.S. Gallons)

The Cessna 182 series airplanes have a wide range of fuel capacities. The total and usable fuel quantities for each model is shown in the Owner's Manual or in the Official Pilot's Operating Handbook and FAA Approved Airplane Flight Manual. The Flint Aero Auxiliary Fuel Tanks contain 24 total gallons and 23 usable gallons for all Cessna 182 series airplanes.

### 2. Operation of Wing Tip Fuel Tanks (transfer)

- To transfer, turn applicable "auxiliary fuel tank transfer switch" on. When auxiliary tanks indicate empty, turn applicable transfer switch off.
- As a general procedure, do not transfer auxiliary tank fuel until after burning approximately 15 U.S. gallons of fuel from each main tank.

NOTE: Should the transfer pump fail, it is not possible to transfer fuel from the affected tank in flight.

### 3. Electrical

Left and right auxiliary fuel transfer tank quantity gauges and pump switches are located on sub panels in left and right wing roots or on the instrument panel or pedestal. The transfer pumps and gauges are powered from the main electrical bus through in-line fuses.

### 4. Fuel Quantity Data (U.S. Gallons)

Add 23 U.S. gallons additional usable fuel to the total fuel available in the Cessna tanks.

In addition to the Cessna main fuel tanks, two auxiliary fuel transfer tanks are installed. The capacity is 12.0 U.S. gallons each tank (11.5 usable U.S. gallons each).

These tanks transfer to their respective main wing tank by transfer pumps controlled by switches in the cockpit.

Each wing tip tank has a water drain and is vented through the fuel filler cap. Fuel gauging is through either individual quantity gauges or a dual gauge.

## NOTES

The auxiliary fuel (transfer) tank quantity gauges are similar in operation to the main fuel tank gauges and visual inspection of the tanks during preflight is the best assurance of fuel quantities. There are no provisions for visually determining reduced tank quantity.

FLINT AERO, INC.  
1942 Joe Crosson Drive  
El Cajon, CA 92020  
Doc No.: FTC453.002

**AFMS for Cessna Model 182 with  
Flint Aero, Inc. STC SA1758WE  
Auxiliary Fuel Tanks**

The fuel in the auxiliary fuel transfer tanks is available to the engine only through the airplane's main fuel tanks. The main fuel tank gauges are the sole reference gauges for immediately available engine fuel.

Should an auxiliary fuel (transfer) tank pump fail, it is not possible to transfer fuel from the affected tank during the flight in progress and the pilot must immediately adjust his range and endurance calculations on the basis of the fuel available through the standard fuel system.

## **SECTION VIII – AIRPLANE HANDLING, SERVICE AND MAINTENANCE WITH AUXILIARY (TRANSFER) FUEL**

### NOTE

Before flight, check through the filler neck for auxiliary tank fuel quantity. No provision is made for calculating reduced capacity fuel in the auxiliary fuel tanks.